


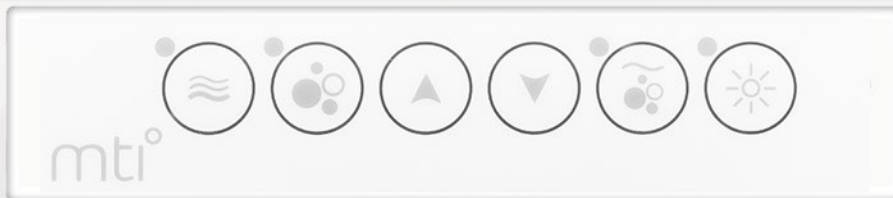

Keypad #4 Operation - Air Bath w/Thermal- & Chroma-therapy



RADIANCE ON/OFF

1st Press:

Turns on both
heated zones.

2nd Press:

Radiance off



AIR BATH ON/OFF

1st Press:

Blower starts.
Use arrows to
adjust speed.

Starts 30%

2nd Press:

Blower stops.



INCREASE

Press & hold
to increase.

Release at
desired
speed/mode.



DECREASE

Press & hold
to decrease.

Release at
desired
speed/mode.



PULSATION MODE

1st Press: WAVE

Speed gradually
varies Min. to Max.

2nd Press: PULSE

Speed quickly varies
Min. to Max.

3rd Press: MAX SPEED

4th Press: PULSE

Returns to Pulsation
Mode



LIGHTS ON/OFF

1st Press: BASIC

Start - white. Use
arrows to cycle colors.

2nd Press: RAINBOW

Starts slow, use arrows
to adjust speed.

3rd Press: SLOW

Aqua blue/green cycle,
use arrows to adjust speed.

Press & Hold to turn off.

Notes:

1. Air Bath blower Stops after 20 Minutes.
3. Air Bath - Seven (7) Minutes after the water has drained from the tub, the blower will automatically turn on for 1 minute to purge water from the top of the air jets.